
紫外線除菌機

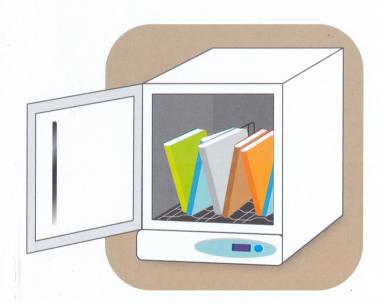


操作123

Sterilizer for Books



1. 開門放書呈V字型

Please place books vertically and form a V shape with another book.

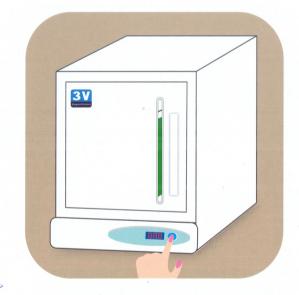

2. 按鈕除菌(約40秒)

Please press the button to start sterilization process (Approximately 40 seconds).



3.取書後關門

Please close the door after taking out the sterilized books.

請勿置入圖書以外或可能淌水之物品

Do not place any item possibly leaking water or others except books.

歡迎使用圖書紫外線除菌機

Sterilizer for Books



連續操作 continual

OHO SEC 間隔 3 分 Interval 3 mins



間隔 1 分 Iterval 1min OH2

間隔 4 分 Interval 4 mins O48 SEC

間隔 2 分 Interval 2 mins OHH SEC 間隔 5 分 (含以上) Over 5mins

SEC

門開自動亮燈為LED安全照明輔助,並非紫外線 UV-C。

Note: LED is auxiliary lighting automatically while opening the door, not ultraviolet

請依圖示將書本兩兩相依,略呈V字型擺置,讓書籍 充分接受紫外線直射,才可以有效除菌。

Put each books dependently and slightly V-shaped on the left shown that the full cover of direct ultraviolet light is more effective sterilization

本機可自動判斷增加<mark>暖機</mark>所需時間,每位讀者除菌秒 數不盡相同(如左圖),請安心使用。

The warm-up time can be increased automatically by different requirements, please feel free and secure



本機為書籍除菌專用,嚴禁置入任何潮濕或可能淌水之物件。

The machine for Book sterilization only, Object to anything with wet stuffs.